

Verifying software version on Nautilus Hyosung ATMs

1. Log in
2. Select "Report"
3. Select "Print All Setup"
4. ATM will print a long receipt detailing various ATM settings.
5. Once the receipt is printed, find the number heading "1. Version Information"
6. Below will be a line "AP:"
 - a. If AP is in the form V01.0X.XX, the ATM is running CE software
 - i. Required software version for CE ATMs will be V01.04.24
 - b. If AP is in the form V06.0X.XX, the ATM is running SE software
 - i. Required software version for SE ATMs will be V06.01.18
7. Press "Cancel" until the ATM logs out and returns to service.

To enable EMV processing on Nautilus Hyosung ATMs

1. Log in
2. Select "Customer Setup"
3. Select "Optional Function 1"
4. Select "EMV"
5. Select "EMV En/Disable"
6. Verify that the EMV box in the center of the screen shows EMV as Enabled
7. Press "Cancel" until the ATM logs out and returns to service.

To activate/deactivate specific AIDs

1. Log in
2. Select "Customer Setup"
3. Select "Optional Function 1"
4. Select "EMV"
5. Select "AID List"
6. Use the "Previous" and "Next" to select to desired AID
7. Select "AID En/Disable" to enable or disable the selected AID
8. Use the "Next List" to view more AIDs
9. Once the desired AIDs have been enable or disabled, press "Cancel" until the ATM logs out and returns to service.