

Verifying software version on Triton RL or Triton ARGO ATMs

1. Log in
2. Look in the upper-right corner of the screen.
3. In the box containing the date and time is a line that says "Prog"
4. Next to "Prog" is the software version in the form X.X.XX
 - a. Required software version for Triton RL/Triton ARGO ATMs is 3.3.2C
5. Press "Enter" several times until the ATM logs out and returns to service.

To enable EMV processing on Triton RL or Triton ARGO ATMs

1. Log in
2. Select 6 "Terminal Configuration"
3. Select 0 "More Options"
4. Select 5 "EMV Configuration"
5. Select 1 "EMV Processing"
6. Verify that the check box next to 1 "EMV Processing" has a checkmark in it.
7. Select 4 "Non-ICC Transactions"
8. Verify that the check box next to 4 "Non-ICC Transactions" has a checkmark in it.
9. Select 5 "ICC Fallback to Magnetic Stripe"
10. Verify that the check box next to 5 "ICC Fallback to Magnetic Stripe" has a checkmark in it.
11. Select 6 "EMV Journal Entries"
12. Verify that the check box next to 5 "EMV Journal Entries" has a checkmark in it.
13. Press "Enter" several times until the ATM logs out and returns to service.

To activate/deactivate specific AIDs

1. Log in
2. Select 6 "Terminal Configuration"
3. Select 0 "More Options"
4. Select 5 "EMV Configuration"
5. Select 2 "EMV Application Settings"
6. Use the left and right arrow keys to scroll up and down the list to the desired AID
7. Press the blank key (key on the keypad with nothing on it) to activate (checkmark) or deactivate (no checkmark) the desired AID
8. Once all desired changes have been made, press "Enter" several times until the ATM0 logs out and returns to service.